


How to clear a clogged compound line on an ECO Pro

STEP 1: Start by gently removing the rubber pinch type compound nozzles. Try not to damage them. After you remove them, run under warm water and roll them in your fingers to clear any dried compound.

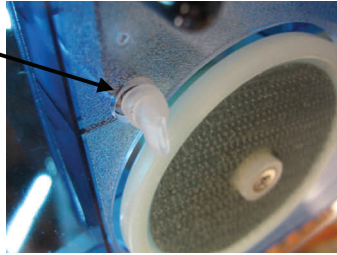

STEP 2: Run the compound pump in reverse by pressing the START, STOP and FUNC buttons simultaneously. The pump will run for about 1 minute. After it stops, run it 2 more times for a total of 3 times in reverse.



STEP 3: Add about 1 to 1.5 ounces of tap water to your compound bottle and shake vigorously.



STEP 4: Run the compound pump in forward by pressing STOP and FUNC simultaneously. Keep running until you get a nice even flow to both nozzles. Now re-install the clean rubber nozzles on the compound tubes.



That should do it! You should now be ready to repair discs!

+1-847-243-4150 sales@elm-usa.com

 **ELM USA**
WWW.ELM-USA.COM